


RS-4000 Diagnostic Menu – Setting Orientation

(See Pg. 51-57 of Installation Guide below for Orientation options)

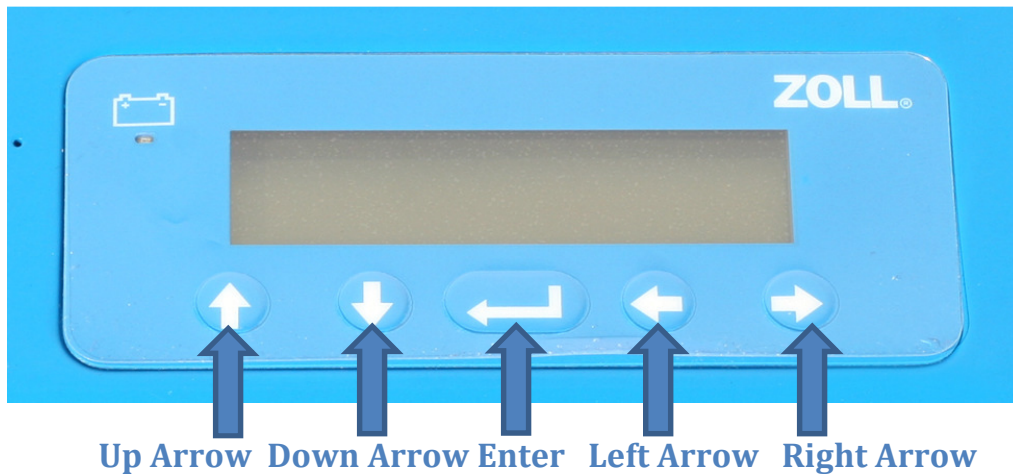

To enter the VID settings menu:

1. Vehicle ignition to **ON** Wait until **Version** shows in display
2. Push and hold the **RIGHT ARROW**
3. Push and hold the **UP ARROW**
4. Release the **RIGHT ARROW**
5. Push and hold the **ENTER BUTTON**
6. Release the **UP ARROW**
7. Release the **ENTER BUTTON**
8. **Main Menu** is displayed

To change the orientation in the VID menu:

1. Use the **UP** or **DOWN** arrow to get to **OPTION 2 - Select VID**
2. Press **ENTER**
3. The **VALUE** screen should be visible. **0000** is displayed
4. Use the **UP + DOWN** buttons until the digit appears in the first field, then use **RIGHT ARROW** to move to the next, repeat until your code is **0366**.
5. Press **ENTER**. The current value is displayed
6. Use the **UP + DOWN** buttons until the digit appears in the first field, then use **RIGHT ARROW** to move to the next, repeat until your value is 00010 (if setting to Orientation 10).
7. Press **ENTER** when done. **MAIN MENU** should be displayed

Saving your changes:

1. From **MAIN MENU** press **DOWN ARROW** to **Option 3 - SAVE CONFIGURATION**
2. Press **ENTER**, then **ENTER** again. **SAVING CONFIG** is displayed
3. Press **ENTER**, then **UP ARROW** to **EXIT**, option 11, Press **ENTER**
4. When **Version** is displayed, power the vehicle off.

Appendix B: Orientation Index

The RS-4000 On-Board Computer can be mounted in any of 24 unique positions. When configuring the unit in ZOLL Online, refer to the chart below and images following to determine the appropriate **Orientation Index Number** to use for your installation. When mounting the unit, ensure it is level, (perpendicular or vertical) and either parallel or square to the centerline of the vehicle.

Orientation Index	Engraved ZOLL Logo facing	Connectors facing
1	Up	Front
2	Up	Rear
3	Up	Left
4	Up	Right
5	Down	Front
6	Down	Rear
7	Down	Left
8	Down	Right
9	Front	Up
10	Front	Down
11	Front	Left
12	Front	Right
13	Rear	Up
14	Rear	Down
15	Rear	Left
16	Rear	Right
17	Left	Up
18	Left	Down
19	Left	Front
20	Left	Rear
21	Right	Up
22	Right	Down
23	Right	Front
24	Right	Rear

Orientation Index 1-4

The On-Board Computer's mounting tabs are on the bottom, and parallel to the floor, ZOLL logo and screen facing up. The ambulance is shown as a reference to how the RS-4000 would be mounted inside the vehicle.

Orientation 1 (default)

ZOLL logo UP, connectors facing front.



Orientation 2 ZOLL logo UP, connectors facing aft.



Orientation 3 ZOLL logo UP, connectors facing left.



Orientation 4 ZOLL logo UP, connectors facing right.



Orientation Index 5-8

The On-Board Computer's mounting tabs are on top, and parallel to the floor, ZOLL logo and screen facing down (mounted under a shelf).

Orientation 5 ZOLL logo DOWN, connectors facing front.



Orientation 6 ZOLL logo DOWN, connectors facing aft.



Orientation 7 ZOLL logo DOWN, connectors facing left.



Orientation 8 ZOLL logo DOWN, connectors facing right.



Orientation Index 9-12

The On-Board Computer is mounted vertically, perpendicular to the floor, ZOLL logo and screen facing forward (wall mounted).

Orientation 9 ZOLL logo FORWARD, connectors facing up.



Orientation 10 ZOLL logo FORWARD, connectors facing down.



Orientation 11 ZOLL logo FORWARD, connectors facing left.



Orientation 12 ZOLL logo FORWARD, connectors facing right.



Orientation Index 13-16

The On-Board Computer is mounted vertically, perpendicular to the floor, ZOLL logo and screen facing rearward (wall mounted).

Orientation 13 ZOLL logo facing rearward, connectors facing up.



Orientation 14 ZOLL logo facing rearward, connectors facing down.



Orientation 15 ZOLL logo facing rearward, connectors facing left.



Orientation 16 ZOLL logo facing rearward, connectors facing right.



Orientation Index 17-20

The On-Board Computer is mounted vertically, perpendicular to the floor, ZOLL logo and screen facing left (right wall mounted).

Orientation 17 ZOLL logo facing right, connectors facing up.



Orientation 18 ZOLL logo facing right, connectors facing down.



Orientation 19 ZOLL logo facing right, connectors facing forward.



Orientation 20 ZOLL logo facing right, connectors facing rearward.



Orientation Index 21-24

The On-Board Computer is mounted vertically, perpendicular to the floor, ZOLL logo and screen facing right (left wall mounted).

Orientation 21 ZOLL logo facing right, connectors facing up.



Orientation 22 ZOLL logo facing right, connectors facing down.



Orientation 23 ZOLL logo facing right, connectors facing forward.



Orientation 24 ZOLL logo facing right, connectors facing rearward.

