




TP-6100 HRA Tie-in to HDPE Surface of Adhesive Back membrane.

detail>> D-1414-157A

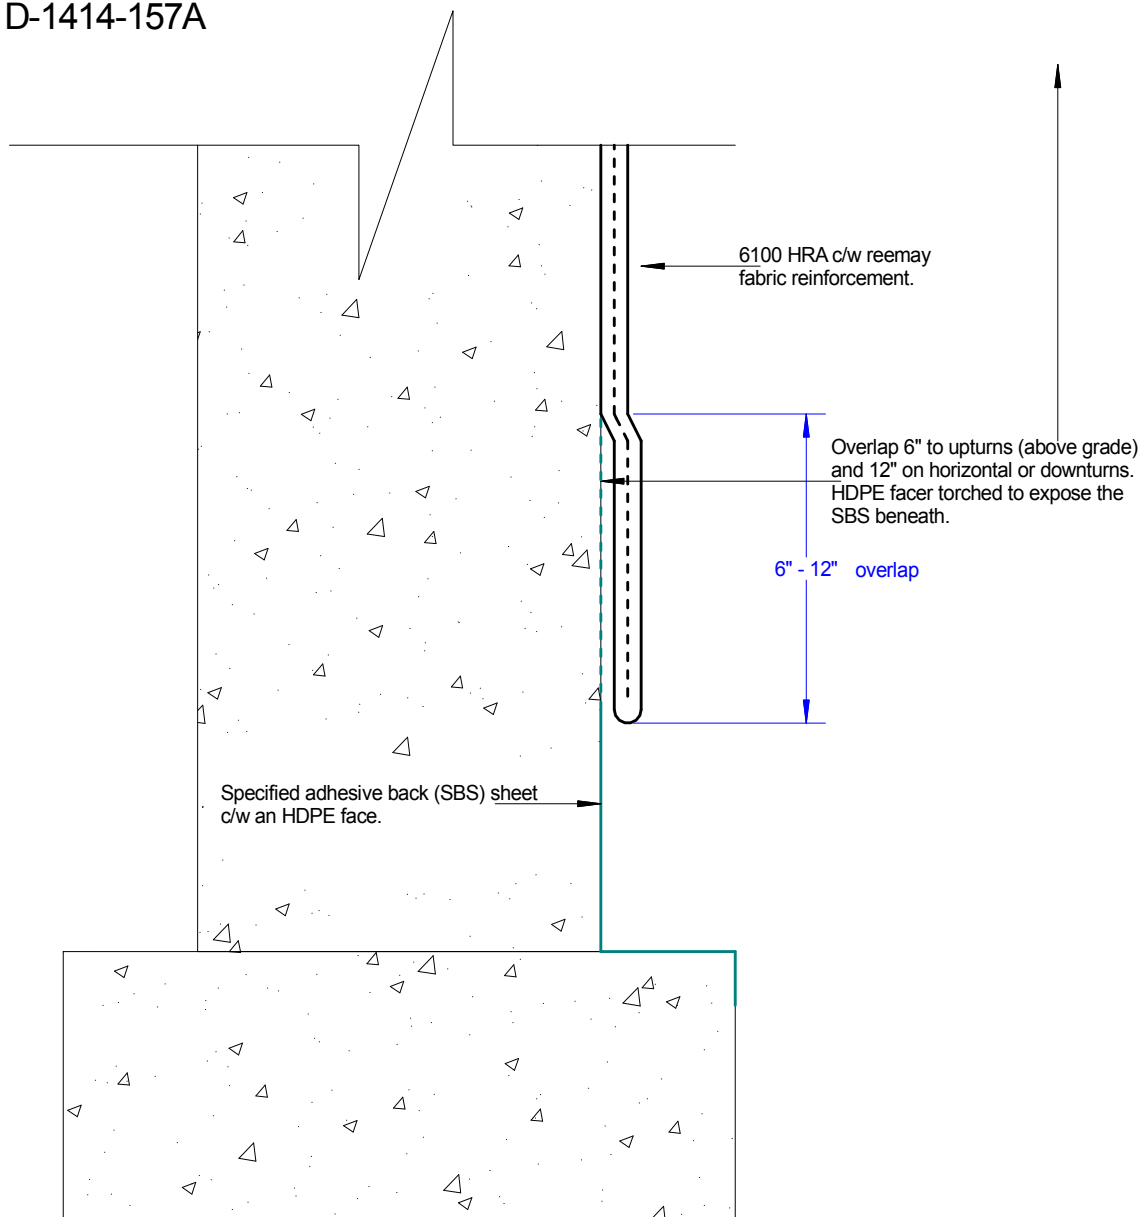

Note: To adhere 6100 to the HDPE surface, torch the HDPE to 50% - 75% damage. The 6100 HRA hot rubberized membrane will do the rest. Adhesive back sheet is normally SBS rubber membrane as is the TP-6100 HRA from Tremco. The bond will be more than substantial. No need to prime the adhesive back sheet.

Tremco Canada
6178 Netherhart Rd.
Mississauga, On.
L5T 1B7
Ph: 905-564-6100
Fax: 905-564-6110

Tremco Inc.
www.tremcosealants.com


Tremco Inc.
3735 Green Rd,
Beachwood, OH. USA
44122
Ph: 216-292-5000
Fax: 216-292-5036

Date: Jun-11-2010		Drawing No. D-1414-157A
Drawn by: G.M.	Approved: <>	Scale:
Project:		



6100 tie-in to HDPE surface of B-3000 adhesive backed membrane

detail>> D-1551-110A

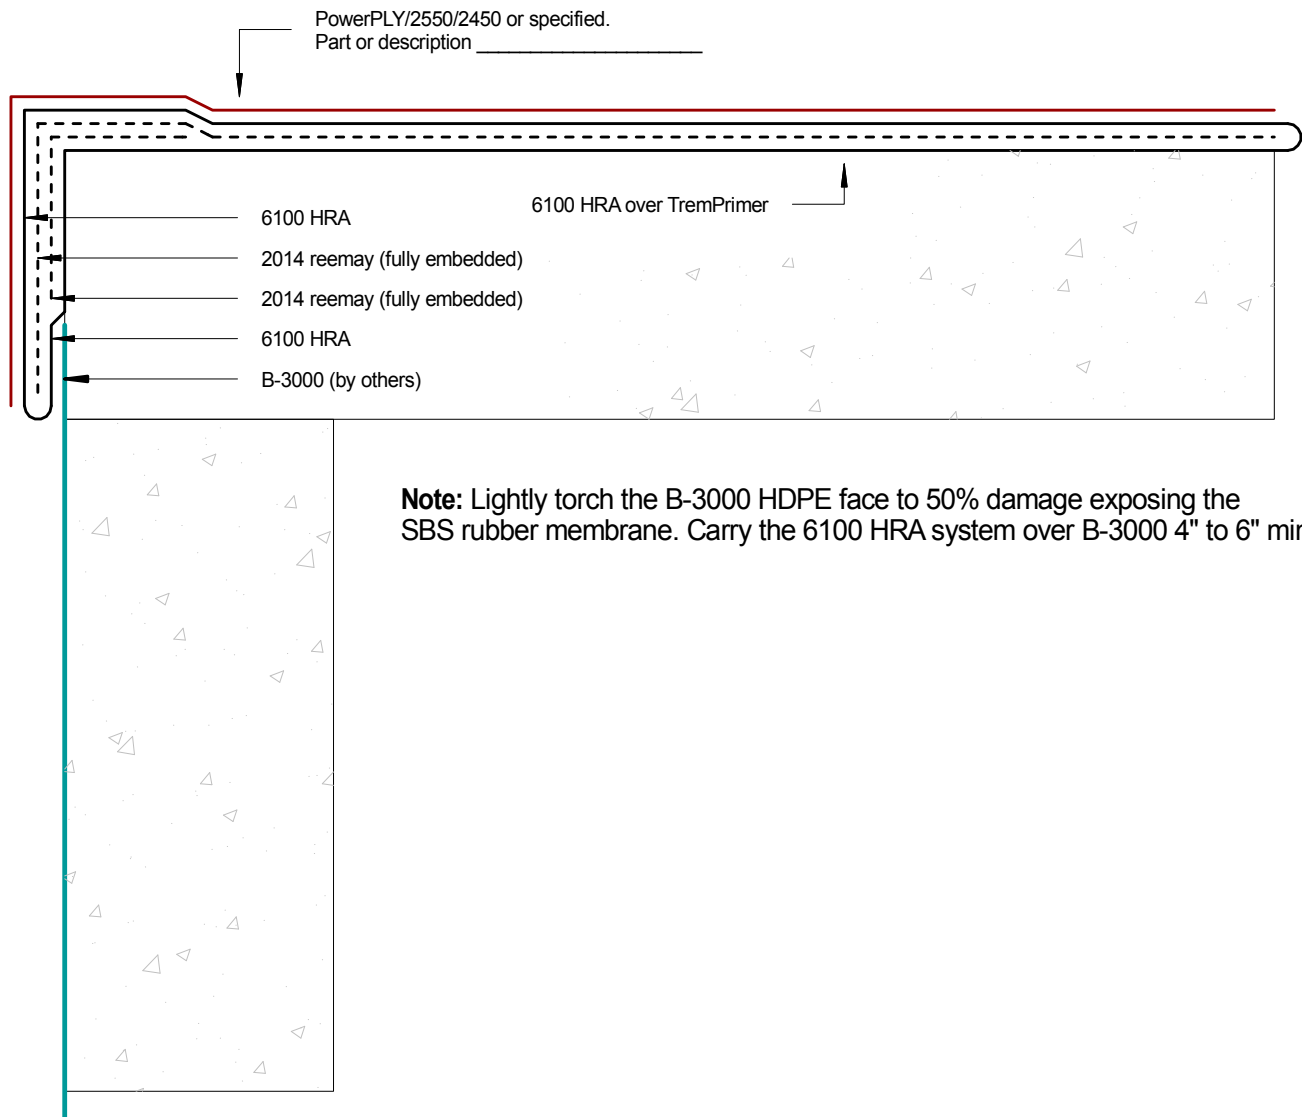

Tremco Canada
6178 Netherhart Rd.
Mississauga, On.
L5T 1B7
Ph: 905-564-6100
Fax: 905-564-6110

Tremco Inc.
www.tremcosealants.com

Tremco Inc.
3735 Green Rd,
Beachwood, OH. USA
44122
Ph: 216-292-5000
Fax: 216-292-5036

<u>Date:</u> Jun-30-2011		<u>Drawing No.</u> D-1551-110A
<u>Drawn by:</u> G.M.	<u>Approved:</u> <>	<u>Scale:</u>
<u>Project:</u>		