




TP-6100 HRA tie-in to existing coal tar based membrane.

detail>> D-1144-2B

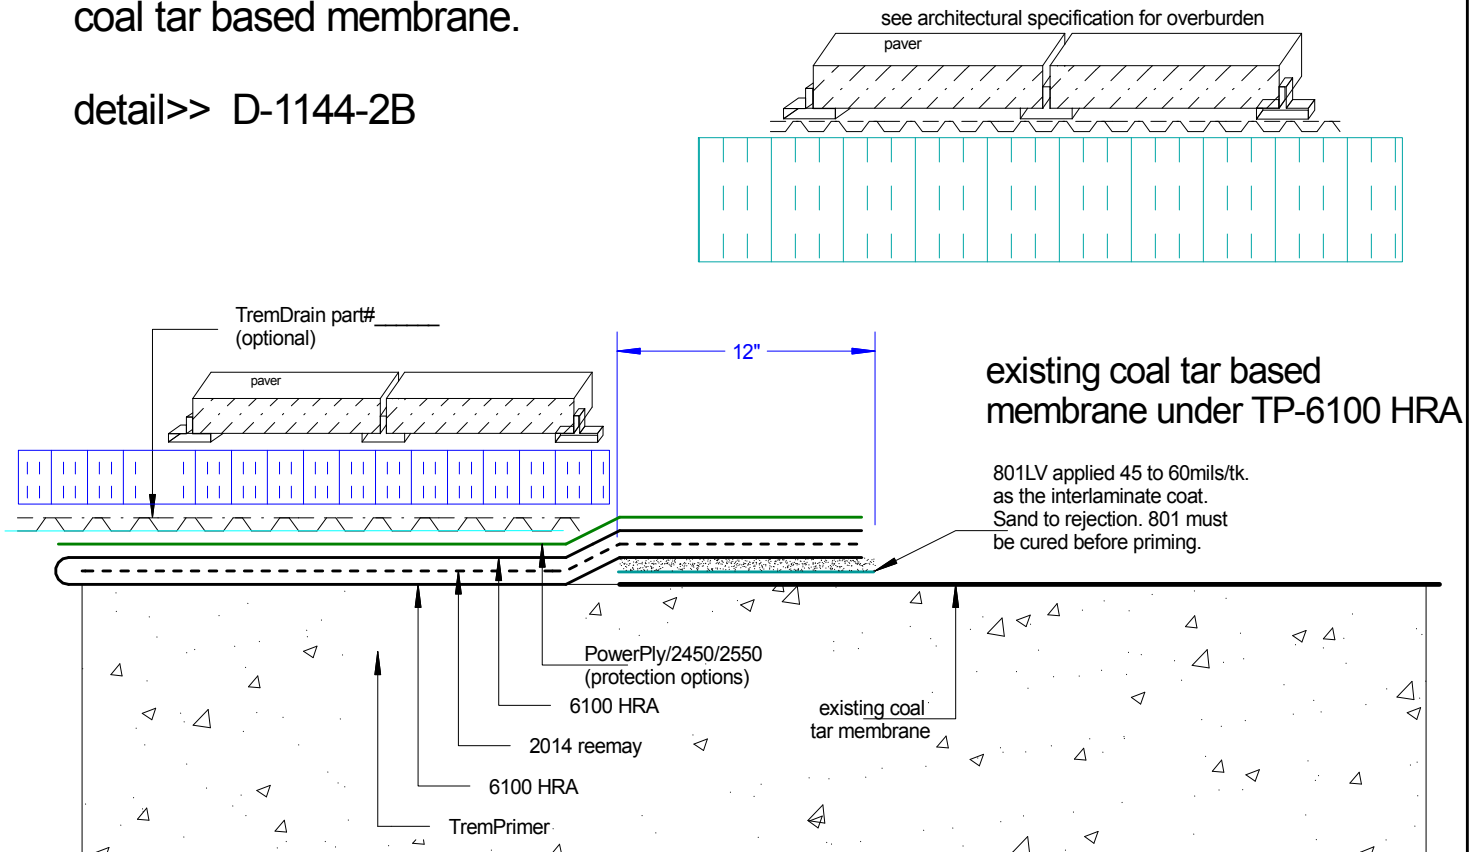

Note:

Strip the existing coal tar membrane protection away from the termination/lamination area. If debris is evident, heat the coal tar membrane and trowel smooth in order to integrate the debris which cannot be removed. Wait until cool and apply a single 45 - 60 mil coat of 801LV directly to the coal tar membrane. Sand the 801 to rejection. The 801 must be fully cured before the application of QD or WB primer. Make sure to brush off any loose sand before priming.

Tremco Canada
6178 Netherhart Rd.
Mississauga, On.
L5T 1B7
Ph: 905-564-6100
Fax: 905-564-6110

Tremco Inc.
www.tremcosealants.com

Tremco Inc.
3735 Green Rd,
Cleveland, OH. USA
44122
Ph: 216-292-5000
Fax: 216-292-5036

Date: Jan-2-2011		Drawing No. D-1144-2B
Drawn by: G.M.	Approved: <>	Scale:
Project: typical		